

## RCA Commercial Lite (BE220) Quick Setup Guide

### Confirm first

- Your remote control has the word '**MASTER**' written on the front.
- Your remote control has two fresh AA batteries properly installed.
- Your facility has either installed an antenna or has signed up for a cable source (DirectTV, Dish Network, Comcast, etc.)

### General Notes

- To 'select' or 'enter', press the **OK** button on the remote.
- You will only use 8 buttons for all of these instructions: **ON•OFF, MENU, OK, 0, ►, ◀, ▲ & ▼**. Use these arrow buttons to move and highlight selections.
- Your RCA TV comes out of the box with factory default settings already set for common preferences.
- See Manual for many more options to customize your TV's performance.
- If screen 'times out' (goes blank) while you are programming, just press **MENU** and ► until you get to '**PARENTAL**' icon and continue.
- To check or uncheck a box , press **OK** button.

### Steps for basic set-up

1. Press **ON•OFF** button to turn TV on.
2. Screen will say '**Initial Set-up**'
3. Press ▼ to highlight '**Signal Type**' (default is '**Air**' for antenna; press ► to select '**Cable**')
4. Press ▼ to highlight '**Auto Channel Search**', and press **OK** to select '**Execute**'. Channels in your area will start programming into your TV; it may take a few minutes.
5. Press **MENU**
6. Press ► until you get to '**PARENTAL**'; the rest of these instructions will be under this category.
7. Press **OK**
8. Screen will say '**Lock Parental Control**' – press **0000** as the password
9. Press ▼ to highlight '**Hotel Menu**' and press ► to get to '**Boot Setting**'
10. Press ► again to get to the following settings:
  - a. '**Picture Mode**' – Picture quality; recommend the default setting.
  - b. '**Volume**' – Initial Start-up Volume; '**OFF**' uses the last volume selected, or use arrows to select between **0-100**; recommend '**8**'
  - c. '**Max Volume**' – use arrows to select between **0-100**; recommend '**25**'
  - d. '**Boot Source**' (**TV, AV, YPbPr, HDMI1/2/3, PC, Media, or OFF**) – can leave as '**OFF**' since it defaults to last selection used.
  - e. '**Boot Channel**' – channel displayed when TV first turns on;  channel of your choice. – Note: '**Boot Source**' must be set to '**TV**' before a Boot Channel can be selected.
11. Highlight '**Hotel Lock Setting**'
  - a. '**Tuner Lock**' –  to prevent channel scanning or adding new channels; menu is only accessible with password.
  - b. '**Keypad Lock**' –  to prevent buttons on side of TV from being operable.
  - c. '**Menu Lock**' –  to prevent menu functions from working; menu is only accessible with password.
  - d. '**Source Lock**' –  to lock out sources such as TV, PC, etc., depending on how you are using TV (as a TV or monitor, etc.)
  - e. '**Channel Lock**' –  to lock out specific channels of your choice.
12. Highlight '**Power Save**' – Turns off TV after a period of inactivity. (Choose **1 hr, 2 hr, 3 hr, 4 hr, OFF**)
13. Highlight '**On/Off Timer**' – Set to have the TV turn '**Auto On**' or '**Auto Off**' daily at a specific time.
14. Highlight '**Export Setting**' – Used to copy TV settings to USB tool; used by those with multiple TVs.
15. Highlight '**Import Setting**' – Copies settings from USB tool to multiple TVs, one at a time.
16. Highlight '**Reset Hotel Setting**' – Resets all menu settings to factory default settings.

