

## RCA Healthcare MPEG4 (HE740/840) Quick Setup Guide

### Confirm first

- Your remote control has the word '**MASTER**' (KM38R01) written on the front.
- Your remote control has two fresh AAA batteries properly installed.
- Your facility has either installed an antenna or has signed up for a cable source (DirectTV, Dish Network, Comcast, etc.)

### General Notes

- To 'select' or 'enter', press the **OK** button on the remote.
- To check or uncheck a box , press the '**OK**' button.
- To return to a previous menu, press the '**Menu**' button.
- If screen 'times out' (goes blank) while you are programming, just press '**Menu**' and '**9632**' on the number pad to enter the '**Commercial Interface**'.

### Steps for basic set-up

1. Press '**Power**' button to turn TV on.
2. Screen will say '**Initial Set-up**'. Press '**OK**' to start the wizard.
4. Select your Language and press '**OK**'.
5. Select your Time Zone and press '**OK**'.
6. Select your tuner mode, '**Antenna**' or '**Cable**' and press '**OK**'.
7. Select '**Scan**' and press '**OK**'. The TV will search for available channels and add them to the channel list. Press '**OK**' to exit.

### Steps for Commercial Interface set-up

Press '**Menu**' to enter the Main Menu, and enter '**9632**' on the number pad to enter the '**Commercial Interface**'. The following lists and describe the features present on this mode line.

#### **Commercial Interface**

**On** - Enables the use of all '**Commercial Interface**' options.

#### **Clone Management**

**Copy To USB** - Copies all TV settings and channel listings to a file on a USB stick.

*Note:* This file can only be used to restore settings to the same model number TV.

**Clone To TV** - Restores settings from a USB Stick.

#### **Channel**

##### **Direct Tuning Access**

**On** - Allows you to directly enter a channel number using the number pad.

**Power On Source** - Select a channel or input that the TV will default to when powered on.

**Off** - The last selected channel/source will be used.

**TV** - A specific channel can be selected.

##### **Power On Tuner Mode**

**Antenna** - Set if you have an antenna input.

**Cable STD** - Standard cable input setting.

**Cable HRC** - Try this setting if '**Cable STD**' produces a poor signal.

**Cable IRC** - Try this setting if both '**Cable STD**' and '**Cable HRC**' produces a poor signal.

**Antenna/Cable** - Select which is applicable to your installation.

**Power On Major/Minor Channel** - Use to select the physical or virtual channel you want the TV to default to.

**<Inputs>** - Any other available input can be selected.

#### **Channel Hold**

**On** - Prevents channel changes.

#### **Merge Channels**

**Air/Cable STD** - Merges antenna and cable channel lists into a single channel list.

**Air/Cable HRC** - Try this setting if '**Air/Cable STD**' produces a poor signal.

**Air/Cable IRC** - Try this setting if both '**Air/Cable STD**' and '**Air/Cable HRC**' produces a poor signal.

**OSD****Channel Banner**

**On** - Channel information is displayed when a channel is changed.

**OSD Timer**

**<Time>** - The amount of time a menu is displayed before it automatically exits.

**Clear V-Chip** - Clears any V-Chip settings from the 'Parental' menu.

**Auto Clear V-Chip** -

**Power On CC**

**On** - Automatically enables Closed Captioning when the TV is powered on.

**Basic Menu**

**On** - Allows guest access to basic menu functions.

**Splash Screen**

**On** - Displays logo when the TV is powered on.

**Source****Input Block**

**<Inputs>** - Prevents the use of any selected inputs.

**SI Vendor Select**

**FTG** - Free-to-Guest mode.

**PPV** - Pay-Per-View mode.

**RS232 Function**

**On** - Enables RS232 communication with the TV.

**DVD** - Enables control of an RS232 capable DVD player using a remote or pillow speaker.

**Map DVD Buttons**

**<Keys>** - Maps DVD player functions to keys on a remote or pillow speaker.

**Auto Side AV**

**On** - The TV will automatically switch to the AUX input if a signal is detected.

**Volume**

**Initial Volume** - The volume level the TV defaults to when powered on.

**Min Volume** - The minimum volume level the TV can be set to.

**Max Volume** - The maximum volume level the TV can be set to.

**Volume Hold**

**On** - Prevents volume changes.

**Blank and Mute**

**On** - Blanks out the screen and mutes the volume on channels that are receiving poor signal.

**Pillow Speaker**

**Note:** The pillow speaker must be enabled in the 'Audio' tab in the basic menu. Set '**Speaker Type**' to '**Bed Speaker**'.

**CH Hold**

**On** - Press and hold the CH button to power off the TV.

**Power Off in Channel List**

**On** - After cycling through the channel list, the TV will power off.

**Pillow Initial Volume** - The volume level the pillow speaker defaults to when powered on.

**Pillow Min Volume** - The minimum volume level the pillow speaker can be set to.

**Pillow Max Volume** - The maximum volume level the pillow speaker can be set to.

**Power Management****Auto Power On**

**On** - The TV will always power back on if power was lost.

**Last** - The TV will power back on if it was on when power was lost.

**Auto Power Off**

**<Time>** - The TV will power off if no user input is detected for the set time period.

**Power Always On**

**On** - Prevents powering off the TV.

**No Signal Power Off** - The TV will power off after 5 minutes if no signal is detected.

**Key Management**

**Key Lock**

**On** - Prevents the use of the buttons on the TV.

**IR (RCU) Type**

**<TV>** - Allows the simultaneous use of up to 3 TVs and remotes in one room. Set each TV accordingly.

**Note:** Remotes must be programmed to match each TV.

**Off** - Disables the use of a remote. Commercial menu functions work normally.

**Reset Commercial Interface** - Resets all '**Commercial Interface**' options to their factory settings.

